

The Panther Highseat

Assembly Instructions

1 Loosen part (a) on both sides and slide down to fold out the shooting rail (b).

2 Grab shooting rail and raise seat section until clip (c) hooks onto the solid rail.

3 Fold out ladder section until it locks straight.

4 Place high seat against a sturdy tree. Pass rope around back of tree and pull through locking mechanism until tight. Ensure tree bites securely within the gripping area.

5 Adjust shooting rail by loosening part (a) on both sides and adjusting rail to your desired height.

Safety Note For transportation, when folded, attach rope to prevent from moving.

Folded Dimensions		Erected
Height: 128cm	Width: 66cm	Height: 250cm
Depth: 66cm		Weight: 12.5kg