

Operational Instructions - Rimfire

1 Adding the batteries to the rimfire. Slide the bottom of the sight-rite and then insert the 2 supplied AAA batteries into the sight-rite as shown.

2 Place the gun on a gun rest and set up a target at a distance of 25 feet.

3 Insert laser into the chamber. **Do not close the bolt.** Flick switch to **ON** to activate the laser.

4 Look through the scope at the target. Adjust the scope until the laser is in the middle.

5 When finished, remember to turn the switch to **OFF** and remove the laser from the chamber.

How does it work?

By adjusting at 25ft, your rifle should be nearer zero at 100 yards as the bullet passes the sight line 2 times on its trajectory.