



1

Insert the fixing into the inside of the brain cavity of the deer skull with the longer section down towards the nose.

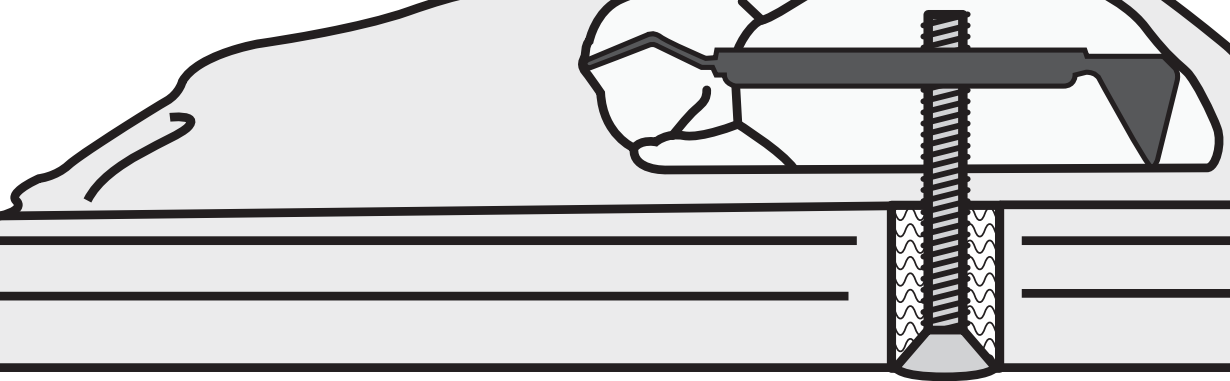

2

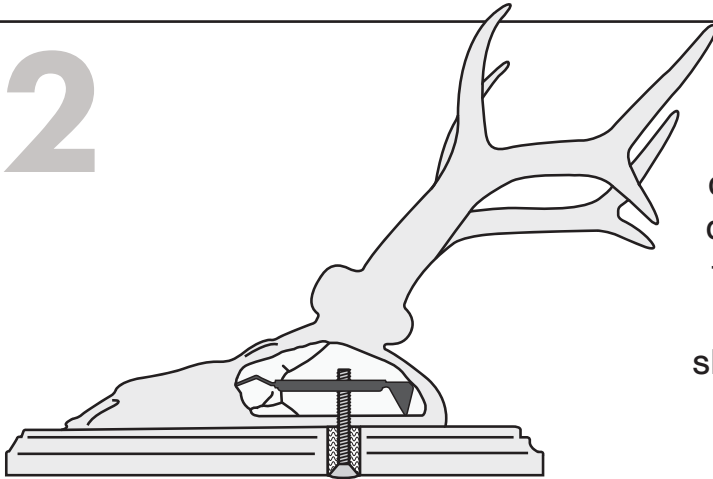

Place the skull on the shield in the desired location and mark the spot for drilling the bolt hole on the shield. Drill the hole through the shield and screw the bolt through from the back of the shield into the fixing (do not over tighten the fixing as bone can be brittle).

## Problems

If the skull has been given a short nose cut, all is not lost. A trick of the trade is to use epoxy carbide body filler in the skull; it sets hard in minutes and means the skull can literally be screwed to the shield from behind.